Y402-11-L LoRa One-to-Many Wireless I/O Module System Specification

Y402-11-L Master	Y402-11-L Slave
	


- User Manual

Contents

1. Overview
2. Ordering Information
3. Key Features
4. Technical Specifications
5. Interfaces and Indicators
6. Mechanical and Environmental
7. Installation and Wiring
8. Important Notes

1. Overview

Y402-11-L links one master with one or more slaves over LoRa. Each unit has 1 DI and 1 SPDT relay output. The basic master/slave set is factory paired.

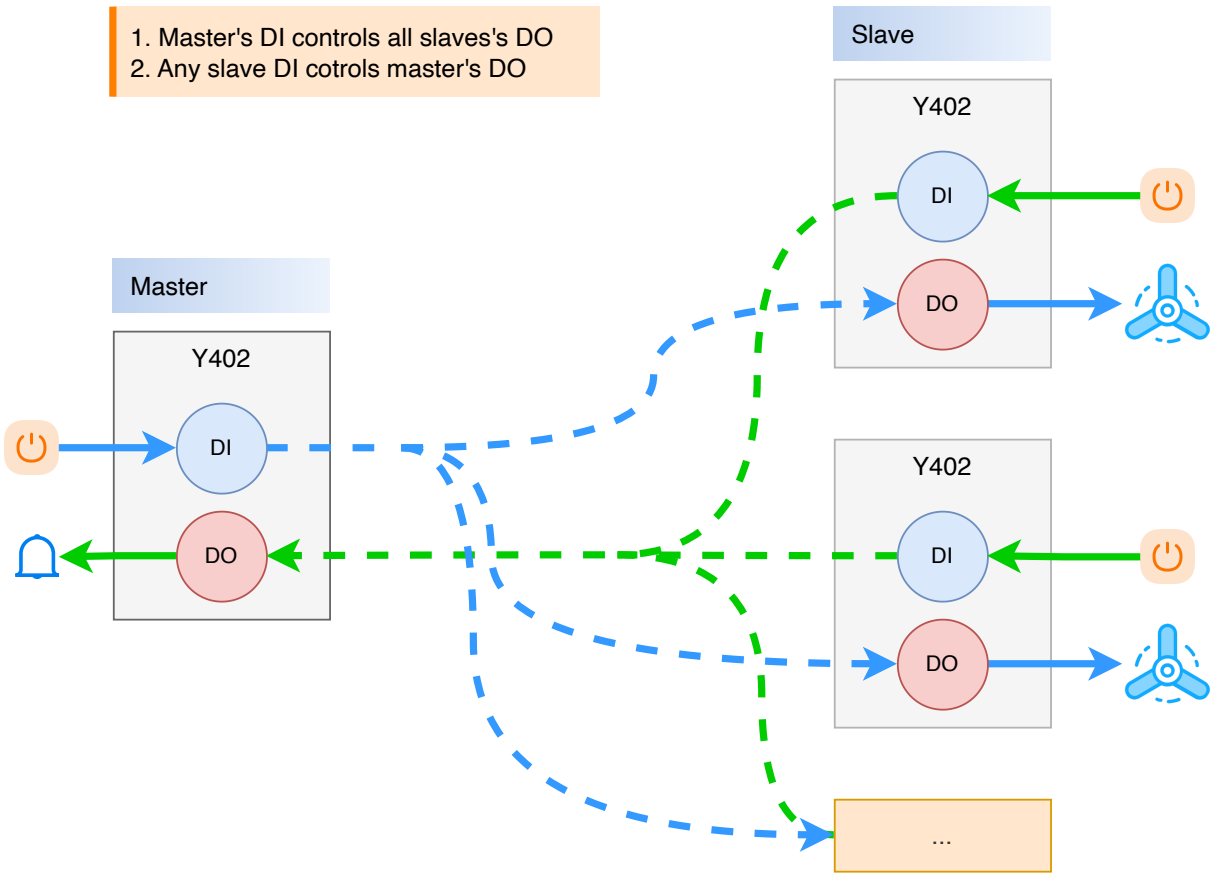

Operating Logic

- **Master to slave**: when the master `DI` is closed, the `DO` on all slave units energizes
- **Slave to master**: when the `DI` on any slave is closed, the `DO` on the master energizes
- During normal communication, the master output resets only after the `DI` on all slave units returns to open

Communication Loss

If wireless communication is lost, the receiver retains the last relay output states for approximately 80 seconds. If communication has not recovered by then, the relay

outputs automatically reset to the de-energized (OFF) state. The normally open (`NO` – `COM`) contacts open.

2. Ordering Information

System Components

Device	Model	Role
Master	Y402-11-L	Central control unit
Slave	Y402-11-L	Remote terminal unit

System configuration:

- Basic system: 1 master + 1 slave (factory paired)
- Expanded system: 1 master + N slaves

Model Configuration

`Y402-11-L` is a one-to-many LoRa system. The first digit, `1`, specifies 1 DI and 1 DO on the master; the second digit, `1`, specifies 1 DI and 1 DO on each slave.

For the full code and examples, see Model Naming.

Package Contents

Qty.	Item
1	Y402-11-L master module
1	Y402-11-L slave module
2	470 MHz magnetic-mount antennas
2	DIN rail clips
1	Quick reference guide

Qty.	Item
1	Warranty card

3. Key Features

- Passive dry-contact/NPN inputs and SPDT relay outputs
- Reverse-polarity protection
- Hardware watchdog
- Private LoRa communication without a SIM card or Internet gateway

4. Technical Specifications

Wireless

Parameter	Specification
Frequency band	398 to 525 MHz
Communication mode	Half-duplex
Communication range	Up to 5 km standard; 10 km option available for selected configurations
Antenna connector	SMA
Standard antenna	470 MHz magnetic-mount antenna

Electrical

Parameter	Specification
Supply voltage	9 to 36V DC

Parameter	Specification
Max. power consumption	1W (master) / 0.8W (slave)
Input type	Passive dry contact / NPN open-collector (no voltage input to DI)
Output type	SPDT relay
Output rating	AC 277V 5A / DC 28V 5A
Operating temperature	-20 to +85 degC
Operating humidity	10% to 90% RH, non-condensing

5. Interfaces and Indicators

Interface Summary (Master and Slave)

Interface	Description
Antenna	SMA connector for LoRa antenna
Power	DC 9 to 36V input with reverse-polarity protection
Input	Passive switch input (`DI` + `COM`)
Output	Relay output (`NO` + `COM` + `NC`)

LED Indicators

LED	Function	Status
Work	System status	On after power-up
Link	Link status	On when the wireless link is established
Input	Input status	On when `DI` is closed

LED	Function	Status
Output	Output status	On when the relay is energized

6. Mechanical and Environmental

Mechanical Specifications

Parameter	Master	Slave
Dimensions	88 × 72 × 59 mm	88 × 37 × 59 mm
Weight	Approx. 50 g	Approx. 50 g
Mounting	35 mm DIN rail	35 mm DIN rail
Protection rating	IP20	IP20
Housing material	Flame-retardant plastic	Flame-retardant plastic

7. Installation and Wiring

Use the Y402-11-L user manual for power, input, and relay wiring, pairing or replacement, and commissioning.

DI accepts dry contacts or NPN open-collector signals, not voltage inputs. Relay contacts require an external load supply. Select the load and protection against the electrical ratings above.

8. Important Notes

- Range figures assume an open-area installation. The 10 km option requires the specified configuration and antenna; obstructions, interference, and antenna placement affect the installed link.

- The half-duplex wireless link is unsuitable for guaranteed timing or as the sole emergency-stop/personnel-safety path.
- Use one master per system.

- **Manufacturer**: Hunan YenGear Tech Co., Ltd.
- **Address**: Room 21014, Building 1, Fudi Xingguang Tiandi, Yingxin Road, Yuhua District, Changsha, Hunan, China
- **Email**: hi@yengear.com
- **Website**: www.yengear.com